

# 70mai Dash Cam T400 Series

## User Manual



### After-Sales Service



Scan and email us at: [help@70mai.com](mailto:help@70mai.com)

### Online Guide



Scan to view the online guide.

70mai

# Contents

English.....	01
Español.....	07
Deutsch.....	13
Français.....	20
Italiano.....	27
Русский.....	33
Português.....	40
Polski.....	46
Magyar.....	52
Український.....	58
Čeština.....	65
Română.....	71
日本語.....	77
한국어.....	83
Tiếng Việt.....	88
ภาษาไทย.....	94
Bahasa Indonesia.....	100
Filipino.....	106
繁體中文.....	112
Türkçe.....	118

Please read this manual carefully before using the product and keep it in a safe place.

## Memory Card Instructions

---

- A memory card (sold separately) must be installed in the dash cam before use.
- The dash cam supports standard MicroSD cards. Please use memory cards with capacity of 32GB–512GB and rating of U3(UHS-3) or higher.
- The default file partition format of the memory card may be inconsistent with the format supported by the dash cam. When inserting the memory card for the first time, please format it in the dash cam before use. Formatting the memory card will delete all files on the card. Please back up important data to another device beforehand.
- The memory card may become damaged or deteriorated after repeated cycles of overwriting, and this may affect its ability to save video and image files. If this occurs, immediately replace it with a new memory card.
- Please use a high-quality memory card purchased from a reputable vendor. Inferior memory cards may have issues such as the actual reading/writing speeds do not match the stated speeds, and the actual storage capacity does not match the stated storage capacity. We shall not be held liable for lost or damaged videos caused by the use of a low-quality memory card.
- Do not insert or remove a memory card while the dash cam is turned on.

## Battery Safety

---

- This device contains a coin battery (lithium battery). DO NOT disassemble, smash, or subject

the product to excessive heat, as this could result in explosion.

- The battery is non removable. DO NOT attempt to replace or repair it. If replacement is required, ONLY have it replaced by a professional with the same model.
- Do not use the product in extreme weathers. Temperatures that are too low or too high may cause the battery to explode or give off flammable gas or liquid.
- Dispose of the cam following all local and national regulations on electronic waste disposal.
- If the battery becomes deformed, swollen, or starts leaking during use or storage, stop using the dash cam immediately in order to avoid safety issues, and contact after-sales service.

## Precautions

---

- Before using this dash cam, please read all the precautions and the online guide to ensure correct and safe use.
- This dash cam is intended to assist drivers with the purpose of recording the environment outside the vehicle. The dash cam does not guarantee the user's driving safety. We shall not be held liable for any accident, damage, or loss of information caused by operating the dash cam while driving.
- Due to differences in vehicle conditions, driving style, driving environment, etc., some functions may not work properly. A power failure, usage in environments outside the normal operating temperature or humidity range, a collision, or a damaged memory card may cause the dash cam to function abnormally. There is no guarantee that this dash cam will function normally under all

circumstances. Videos recorded by this dash cam are for reference only.

- Please install this dash cam correctly, and do not block the driver's line of sight, nor block the vehicle's airbag, in order to avoid product failure or personal injury.
- Please use the included car charger, power cord, and other accessories in order to avoid product failure due to non-conformance. We shall not be held liable for any loss or damage caused by the use of a non-genuine car charger or power cord.
- Please keep this dash cam away from any strong magnetic fields, as they may cause damage to the dash cam.
- Do not use this dash cam in environments with temperatures over 60°C or below -10°C.
- Please only use this dash cam within the scope permitted by law.
- This device is not a toy. Some of its small components may pose risk of suffocation to children. Keep it out of the reach of children.

## Package Contents

---

If you purchased the Dash Cam Set, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

- Rear camera package\* × 1

 
\* This package contains the rear camera, rear camera wire and other accessories for the rear camera. For more information, please refer to the rear camera user manual.

 
If you purchased the dash cam only, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

## Product Overview

---

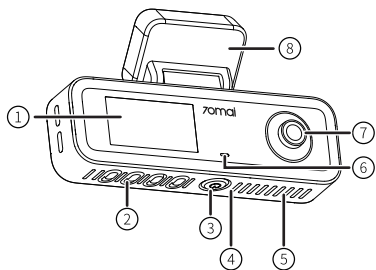

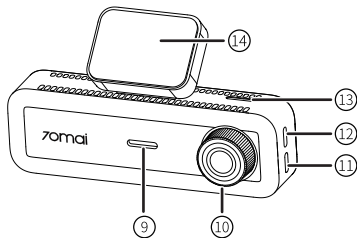

- ① Display screen
- ② Function buttons
- ③ Power button
- ④ Microphone
- ⑤ Ventilation holes
- ⑥ Indicator
- ⑦ Cabin camera
- ⑧ Bracket
- ⑨ Speaker
- ⑩ Front camera
- ⑪ Power port
- ⑫ Rear camera port
- ⑬ Memory card slot
- ⑭ Adhesive sticker

Note: Illustrations of the product, accessories, and user interface in the user manual are for reference purposes only. The actual product and functions may vary due to product enhancements.

## Installation

 
### 1. Installing the electrostatic sticker

Paste the electrostatic sticker on the recommended

area on the front windshield. Press the sticker to remove air bubbles out.


Avoid the edge of the windshield and select the flat and smooth area for the installation.

Note: Keep the windshield clean and dry without liquid residue to prevent the sticker from losing adhesion and dash cam from dropping.

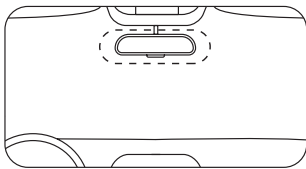


### 2. Installing the mount

 Align the mount to the slot on the back and slide it up.

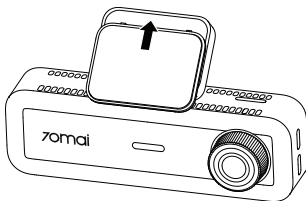


### 3. Inserting the memory card

 Insert the memory card into the card slot.

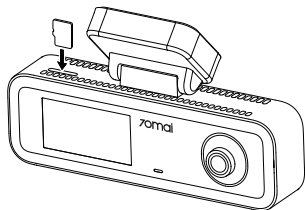


#### 4. Mounting the dash cam

 Remove the release liner on the mount and paste the cam to the electrostatic sticker.

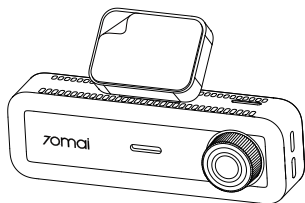

#### 5. Connecting the power cord

 
Connect the dash cam and car charger with the power cord.

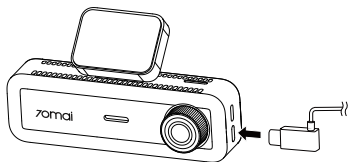

#### 6. Routing cable

Route the power cord to the vehicle's power outlet

 and plug the car charger into the power outlet. Start the car engine, and the dash cam will automatically turn on.

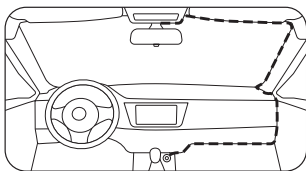


Notes:

- Use the included wiring trim tool to hide the power cord underneath the vehicle's headliner and rubber seal along the A-pillar.
- Depending on the vehicle, the cigarette lighter socket may be located in a different position. The above figure is for reference only.

#### 7. Adjusting the camera angle

 Adjust the camera angle based on the image presented on the main screen when dash cam is turned on.

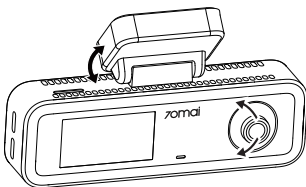

### Connecting with the 70mai App

This product can be used in conjunction with the 70mai app. Follow the steps below to connect it with

the app.

1. Scan the QR code to download and install the app. Or search for "70mai" in the app store to download and install it.



Scan to download the app

2. Open the app, tap "+" in the device page, find the corresponding dash cam type and tap the dash cam image.
3. Turn on the dash cam and enable the Wi-Fi hotspot. Follow the on-screen instructions to connect the dash cam's Wi-Fi hotspot in your phone's settings.
4. Once successfully connected, go back to the 70mai app. In the device page, connect the dash cam and enter the dash cam's homepage. You can view the live video and configure the dash cam settings.

Note: Android 5.0 & iOS 12.0 or above is required to connect to the dash cam's Wi-Fi hotspot with a mobile phone.

If you need more help when connecting the app, please scan the QR code to view the tutorial video.



Scan to view the video

## Voice Control

---

The cam supports voice control. When the dash cam is operating, voice commands from the user will trigger the corresponding functions.

Supported languages are English and Mandarin (when the dash cam's system language is Traditional Chinese). The voice commands are as follows:

Voice commands	Cam responses
Take photo	Take a photo.
Record video	Record an emergency video.
Record audio	Record audio as well as videos.
Turn off audio	Turn off audio recording.
Enable hotspot	Turn on Wi-Fi hotspot.
Disable hotspot	Turn off Wi-Fi hotspot.

Note: When the dash cam is connected with the 70mai app, voice control is not supported.

## Accessories

---

The rear recording function is only available with rear camera (s) installed. Scan the QR code for the user guide of the rear camera.

Note: To avoid device malfunction caused by incompatibility, it is recommended to use a rear camera from 70mai.



## Specifications

---

Product: Dash Cam

Model: T400, T400-1

Input: 5V  $\overline{\text{---}}$  2.4A

Resolution: 2560  $\times$  1440

Lens: FOV 125°/ F1.55

Power supply: Car cigarette lighter

Wireless connectivity: Wi-Fi IEEE 802.11b/g/n/ax  
2.4GHz; Bluetooth® 5.0

Wi-Fi operation frequency: 2400-2483.5MHz

Wi-Fi maximum output:  $\leq$  20dBm

Bluetooth operation frequency: 2400-2483.5 MHz

Bluetooth maximum output:  $\leq$  10dBm

GPS/GLONASS/Galileo/QZSS Operation Frequency:  
1559-1610MHz

## Compliance Information

---

### WEEE information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted

household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

### EU declaration of conformity



The manufacturer hereby, declares that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: <https://help.70mai.asia/1193.html>

Service: [help@70mai.com](mailto:help@70mai.com)

For further information, go to [www.70mai.com](http://www.70mai.com)

Manufacturer: 70mai Co., Ltd.

Address: Room 2220, Building 2, No. 588 Zixing Road, Minhang District, Shanghai, China